

EHV-SUPPLYCARD

EHV-SUPPLYCARD, battery insert for EHV

Reference arguments

Battery insert for replacing batteries in EHV-S and EHV-P.
Also requires use of EHV SUPPLY TRAF0