

# 1 ROOF DUCTS

Roof duct

## TGR250-1200

TGR250-1200

Round roof cowl for DTH roof fan mounted on top of the roof cowl



### PRODUCT BENEFITS

- Supplied with perform or zinc flashing
- Available in sizes corresponding to DTH – in 3 different lengths
- Insulated against sound and condensation

### Principles of operation

TGR is supplied as standard in 3 lengths and 6 sizes with PERFORM flashing appropriate to the roof pitch. TGR can also be supplied with zinc flashing or without flashing. Must be stated on order.

PERFORM comes as standard in black, but grey and red can be ordered at no extra cost.

### Product description


Roof vent TGR (round) has been specially developed for DTH roof fans. Together the roof fan and roof vent form an elegant architectural whole. The roof fan is mounted directly on top of the roof vent. The base can be mounted with a diffuser or the vent can be extended with a duct or T-pipe.

By mounting an extractor fitting in the room, you get an optimum air handling solution with minimum pressure drop and low sound levels, even at high airflow rates.

Externally, TGR is constructed from a galvanised sheet, and underneath, a 50-mm mineral wool, fine-mesh fabric and an internal galvanised perforated sheet

### Dimensional data

L1 (mm)	1200
Ø C (mm)	370
Ø C1	250

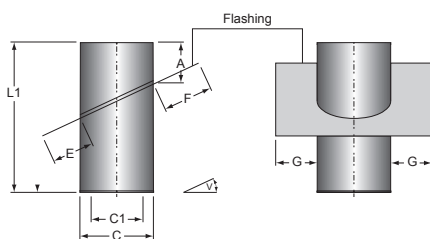

Roof duct

**TGR250-1200**


**TGR250-1200**

**Installation**

The roof vent is insulated for sound and condensation. To avoid transfer of vibrations to the roof vent, a rubber ring is mounted on the fan.

As standard the roof vents are mounted with anti-backdraught shutter AOR, but can also be specially ordered without this. When cleaning the roof vent and/or connector duct, the anti-backdraught shutter is easily detachable without use of tools. The anti-backdraught shutter AOR opens when the fan is in operation.

If there is a long distance between the roof vent and the extractor fitting, an extension can be formed with spiral tube or similar, with a duct fitting directly attached to the base of the roof vent.

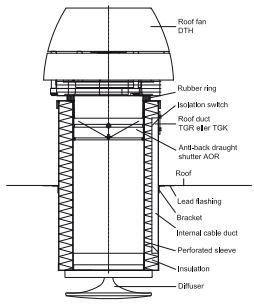

The roof vent is insulated for sound and condensation. To avoid transfer of vibrations to the roof vent, a rubber ring is mounted on the fan.


The roof vent has been designed to take an electric cable via the integral cable duct. The installation cable is inserted in the cable duct at the bottom and drawn up by the safety switch, which is not normally an EXHAUSTO delivery. The safety switch is mounted directly on the roof vent.

Make a hole in the roof about 30 mm larger than the vent, and loosen overlying tiles/panels, sliding them upwards to permit insertion of flashing.

Carefully position the vent on the roof with the flashing level with the roof tiles. Fix the brackets to the vent, lifting it by about 5 mm when the brackets are subsequently fixed to the rafters. This will ensure that the whole weight rests on the brackets.

Roll out the flashing and knock it carefully into shape (with PERFORM, a rubber hammer or sandbag must be used). Replace overlying tiles/panels over the flashing.

If ventilation is required from several locations, a spiral tube can be mounted to the base of the roof vent with duct fittings or T-pieces, sound locks etc. connected to a complete ducting system to the desired locations.

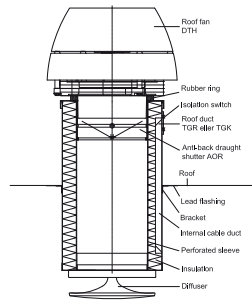


The roof vent has been designed to take an electric cable via the integral cable duct. The installation cable is inserted in the cable duct at the bottom and drawn up by the safety switch, which is not normally an EXHAUSTO delivery. The safety switch is mounted on the control panel as shown in the guide 3004346.

Flashing can vary by  $\pm 2.5^\circ$  relative to the given roof pitch.


An EXHAUSTO roof fan, roof vent and diffuser at the base of the roof vent will provide an optimum air handling solution for the minimum of space, for example on flat or sloping roofs with a short distance to the extraction point.



As standard the roof vents are mounted with anti-backdraught shutter AOR, but can also be specially ordered without this. When cleaning the roof vent and/or connector duct, the anti-backdraught shutter is easily detachable without use of tools. The anti-backdraught shutter AOR opens when the fan is in operation.

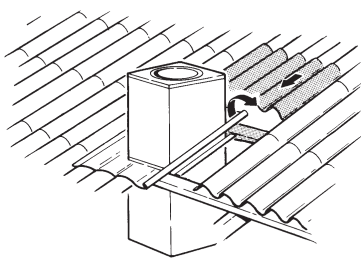


REF 1508-01

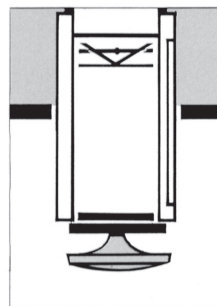

An EXHAUSTO roof fan, roof vent and diffuser at the base of the roof vent will provide an optimum air handling solution for the minimum of space, for example on flat or sloping roofs with a short distance to the extraction point.

If there is a long distance between the roof vent and the extractor fitting, an extension can be formed with spiral tube or similar, with a duct fitting directly attached to the base of the roof vent.

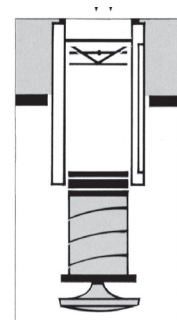

Make a hole in the roof about 30 mm larger than the vent, and loosen overlying tiles/panels, sliding them upwards to permit insertion of flashing.

Carefully position the vent on the roof with the flashing level with the roof tiles. Fix the brackets to the vent, lifting it by about 5 mm when the brackets are subsequently fixed to the rafters. This will ensure that the whole weight rests on the brackets.

Roll out the flashing and knock it carefully into shape (with PERFORM, a rubber hammer or sandbag must be used). Replace overlying tiles/panels over the flashing.


### 3 ROOF DUCTS

---

Roof duct

**TGR250-1200**

TGR250-1200

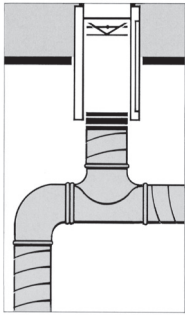

If ventilation is required from several locations, a spiral tube can be mounted to the base of the roof vent with duct fittings or T-pieces, sound locks etc. connected to a complete ducting system to the desired locations.